Owner's Manual

- 1. Locate the hole in the boat and access that area of the airecell and outer skin by opening the zipper.
- 2. Using a towel, dry the area to be worked on.
- 3. Cut a patch of fabric at least two inches larger in length and width than the puncture, hole, or tear.
- 4. Clean the area to be patched (using MEK or alcohol prep pads).
- 5. Rough up both the patch and the area to be patched with the sand paper.
- 6. After opening the 2-part adhesive, prepare the Stabond glue by pouring the entire contents of the glass jar into the metal can and stir using a popsicle stick or tongue depressor.
- 7. Apply an even coat of glue with a small brush to both the patch and the area to be repaired and let dry completely, approximately 10-15 minutes.
- 8. Apply a second coat of glue, and let dry 5 minutes or until tacky. If the glue is too dry, dampen with a small amount of cleaner.
- 9. Place the patch over the hole or tear, and press together. Using a roller or another blunt object press from the center of the patch to the edges to seal the patch to the airecell or outer skin. Make sure that the patch seals completely and is without bubbles.
- 10. Let the glue cure at least one hour before inflating (overnight if possible is best). Do not inflate to full pressure on the same day of the repair.

The Ultimate Extended Trip Repair Item

The ultimate repair part for any boat is an extra airecell.

Extensive Repairs

If you have a major rip or tear in your boat that is beyond your abilities to repair, please contact Outcast Sporting Gear at 800-966-0976 for a Return Authorization (RA) number. Please put a brief note with your contact information and a detailed description of the repairs necessary inside the box and ship the package to the address below with the RA number clearly written on the outside of the box. For your protection, please ship the boat with a service that provides a tracking number.

Warranty

This warranty covers defects in materials and workmanship only for a period of 5 year from the date of purchase for the original owner.

If you experience a problem with the boat, please contact Outcast Sporting Gear at 800-966-0976 for a Return Authorization number. Repairs not covered under the warranty will be made to the boat for a small fee.

Outcast Sporting Gears reserves the right to determine whether to repair or replace any product covered by this warranty and the right to replace any discontinued models with current models when necessary. Colors may vary between original and replacement parts.

If you have any questions, please contact your nearest dealer or Outcast Sporting Gear, 2021 E. Wilson Lane, Meridian, ID 83642, 800-966-0976 www.outcastboats.com





Prowler ASSEMBLY INSTRUCTIONS AND OWNER'S MANUAL



This owner's manual will help you with initial set up of your new float tube, provide basic safety information, review boat maintenance tips, plus cover some simple field repairs. Please review this material and familiarize yourself with the craft before using it.

If this is your first float tube please consult with your local dealer to ensure that you are comfortable operating this craft safely.

PLEASE KEEP THIS MANUAL IN A SECURE PLACE AND TRANSFER IT TO THE NEW OWNER IF YOU SELL THIS BOAT.



Know the limits of your ability and the limits of your equipment.



BEFORE YOU BEGIN... Check for damaged or missing parts. (See page 2)

Outcast Sporting Gear, P.O. Box 186, Meridian, ID 83680 Ph. (800) 966-0976 - Fax. (208) 955-0477 - E-mail: info@outcastboats.com Monday - Friday 8 a.m. - 5 p.m. MST

WARNING

Always wear a government approved floatation devise.

Table of Contents

PROWLER ASSEMBLY INSTRUCTIONS

Items Included	2
Inflation Instructions	3-4
Cargo Pocket Installation	4
Stripping Apron Installation	5
Hydration Bladder Installation	5

OWNER'S MANUAL

Transporting	6
Cleaning	_6
Storage	6
Basic Trouble Shooting	6
Basic Field Repairs	7-8
Warranty	8

Items Included:



Repair Kit Contains:

- 1 6" X 6" Pack Cloth Fabric
- 1 6" X 6" PVC Fabric
- 1 6" X 6" Urethane Coated Nylon
- 2 6" X 6" Urethane Material
- 1 Summit 2 Valve Adapter
- 1 Summit Valve Wrench
- 1 Vinyl Tubing Adapter
- 3 Tear Aid[™] Patch Type A
- 2 Alcohol Prep Pads
- 1 Tear Aid Instruction Sheet
- 1 Piece Sandpaper





1 - Hand Pump

Owner's Manual

This boat contains a starter repair kit that includes equipment for basic repairs.

The Repair Kit Contains

- 2 6" X 6" PVC Material
- 1 Summit Valve Wrench
- 1 Piece Sandpaper
- 1 Summit 2 Valve Ada 3 - Type A Adhesive Pa
- 1 Tear Aid Instruction Sheet

Here is a list of items, not included,	which you should
*1/4 pint Stabond 2-part adhesive	Scissors or knife
Roller	MEK solvent
Duct tape	Old toothbrush
Standard Screwdriver	

*It is recommended that the glue be replaced every year.

Repair Tips

Prior to opening the boat's zippers, make sure they are clean and clear of any debris so that they will operate freely, by cleaning the zippers with soapy water and an old toothbrush.

When patching the airecell, apply the patch to the outside of the airecell. When patching the PVC shell, apply the patch on the inside of the PVC. The airecell patch is for air retention. The PVC shell patch protects the airecell patch as well as prevents the hole from tearing further.

Adhesive Patch Repair

Items needed:	
Towel	Alcohol Prep Pad
Type A Adhesive Patch	Tear Aid Instruction Sh

For most repairs, the airecell does not need to be removed completely.

- 1.
- Using a towel, dry the area to be worked on. 2.
- Clean area to be worked on with alcohol prep pad and let the area air dry. 3.
- Peel backing paper off Type A Adhesive Patch and apply patch over punctured area. 4. (See Tear Aid instruction sheet for more details.)
- Press and rub patch so that the patch seals completely and is without bubbles. 5.

Glue Repair

Items needed: Scissors or knife Stabond 2-part adhesive Small brush

Slotted Screwdriver Sandpaper PVC Material or Vinyl Material

For most repairs, the airecell does not need to be removed completely. When patching the airecell, apply the patch to the *outside* of the airecell. When patching the PVC shell, apply the patch on the inside of the PVC.

1 - 6" X 6" Urethane Material	1 - 6" x 6" UCN Material
1 - Summit 2 Valve Adapter	1 - Vinyl Tubing Adaptor
3 - Type A Adhesive Patches	2 - Alcohol Prep Pads

d strongly consider keeping with your repair kit at all times. Small paintbrush Towel Popsicle stick or tongue depressor

Sheet

Locate the hole in the boat and access that area of the airecell and outer skin by opening the zipper.

Roller Popsicle stick MEK or Alcohol Prep pads

Owner's Manual

Transporting

To avoid excessive wear and extend the life of this craft we recommend transporting this craft in a Outcast Sporting Gear boat bag or cover with clean, dry tarp. Do not load other equipment, particularly heavy or sharp objects, on top of the craft. If you transport your boat in an open truck bed please make sure all sharp objects are removed because more boats are damaged in transport than on the water.

VALVE CAPS SHOULD ALWAYS BE IN PLACE WHENEVER TRANSPORTING YOUR BOAT.

Cleaning and Maintenance

Your inflatable boat is constructed with high quality materials and superior workmanship however, as with all outdoor equipment proper cleaning and maintenance will extend the use of the product and allow it to perform better. Most damaging to your inflatable boat are extended UV exposure, insect repellents, plus mold and mildew. To keep your boat performing its best please following these simple instructions.

- Do not set your boat on sharp objects.
- Keep the zippers clean.

- Do not over inflate your boat.
- Clean the boat with soap and water.
- Allow the boat to drain properly so it can be stored dry.

Storage

1.


Short Term Storage - Allow to air dry, deflate and roll loosely

Long Term Storage - Store your boat dry and clean. After use, rinse off all debris and allow the boat to air dry on soft pressure and out of direct sunlight. Residual water inside the bladders/airecells will not damage the boat. Store the boat in a cool, dry place out of sunlight and away from exhaust fumes. If you store your boat inflated you should be able to pinch an inch of material, but not to operating pressure is the best.

Basic Trouble Shooting

- Valve does not retain air when pump is removed.
 - Make sure that the valve stem is in the up or closed position.
 - Clear any debris that might be preventing the valve from sealing. This can be accomplished by either pumping quick bursts of air into the valve or removing the core valve assembly and cleaning the edge of the rubber diaphragm with a cotton swab and denatured alcohol.
 - Make sure that the core valve assembly is tight. Tighten with valve wrench if necessary.
- Tube becomes soft after inflation process. 2.
 - Determine which air chamber is soft. Make sure the valve is functioning correctly, with no signs of leaking. (See above)
 - Find the hole in the airecell and patch with the Tear Aid patch.
- Tube is puckered or shows a void when inflated. 3.
 - The airecell might be misaligned. Deflate the tube(s) and as they are brought back up to pressure, manipulate the tube(s) to free the airecell as it inflates. If this does not fix the problem, deflate the boat, open the zipper and adjust the airecell.
- *Zipper is difficult to operate.* 4. • Use a combination of soap, water and an old toothbrush to clean and clear the zipper of debris.
- Tear Aid patch does not stick to airecell. 5. • Make sure the area to be patched is dry and clean. Use the alcohol pad to prep the area, if necessary.
- www.outcastboats.com 6


Floor Inflation Items needed:

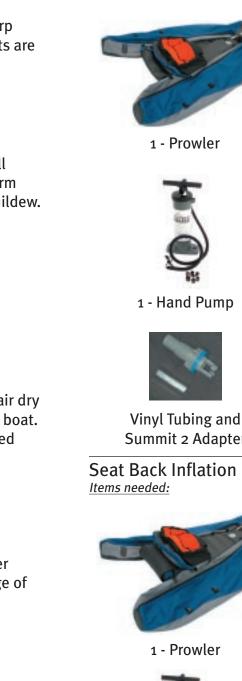





1 - Hand Pump

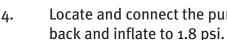

A guideline for gauging the proper pressure is to push down with your thumb at the center of the tube. If you can deflect about a half an inch from the top plane of the tube, it will be close to 1.8 psi.

1 - Vinyl Tubing and Summit 2 Adapter

on a flat surface.

- 2. Close the Summit 2 valve by pressing and turning the valve stem 1/4 turn clockwise. This will position the valve stem in the up or closed position.
- Using the Hand Pump, vinyl 3. tube adapter and the Summit 2 valve adapter, evenly, approximately 1.8 psi.

Vinyl Tubing and Summit 2 Adapter

1. Place the deflated Prowler

inflate the float tube until the cover fills out firm and



Summit 2 Valve in closed position

If at any point during the inflation process the float tube appears to look disfigured, stop and release the air from the float tube, then unzip the float tube and straighten the interior bladder. Once adjustment to the bladder has been completed, carefully close the zipper and re-inflate.

Locate and connect the pump/valve adapter pump to the valve in the seat

Float Tube Inflation Items needed:



1 - Prowler



1 - Hand Pump



1 - Vinyl Tubing and Summit 2 Adapter

Cargo Pocket Installation Items needed:



1 - Prowler



2 - Deluxe Cargo Pockets

5. Locate and connect the pump/valve adapter to the collar and inflate to 1.8psi.

To deflate: Depress the valve stem and turn 1/4 turn counter-clockwise. This will position the valve in the down/open position.





Changes in air temperature and elevation may cause the air to inside the float tube expand and could cause it to burst.

Never leave your fully inflated float tube sitting in direct sun out of the water.

ALWAYS RELEASE SOME AIR WHEN THESE CONDITIONS OCCUR.




Using 4 side release buckles for each pocket, connect the Deluxe Cargo 6. Pockets to the Prowler.

Hydration Bladder Installation Items needed:





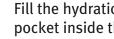

7.

8.

9.

1 - Hydration Bladder

(See Detail 1)

Stripping Apron Installation Items needed:





1 - Stripping Apron

Once seated in the Prowler install the apron stays into the pockets located on the interior portion of the collar.



Detail 1

Fill the hydration bladder with your favorite beverage, open the hydration pocket inside the seat back pocket and insert the hydration bladder.

Feed the hose though the opening at the lower edge of the pocket and thread the hose through the opening near the termination of the zipper.

